

iPhone User Guide

For iPhone OS 3.1 Software

Contents

9	Cha	oter 1	:	Getting	Started
_		P		CCCCIII	Jean cea

- 9 Viewing the User Guide on iPhone
- 9 What You Need
- **10** Activating iPhone
- 10 Installing the SIM Card
- 10 Registering iPhone
- 11 Setting Up iPhone Using VoiceOver
- 11 Syncing
- 16 Mail, Contacts, and Calendar Accounts
- 18 Installing Configuration Profiles
- 19 Disconnecting iPhone from Your Computer

20 Chapter 2: Basics

- 20 iPhone at a Glance
- 23 Home Screen
- 26 Buttons
- 28 Touchscreen
- 31 Onscreen Keyboard
- 37 Searching
- 38 Voice Control
- 39 Stereo Headset
- 40 Connecting to the Internet
- 43 Battery
- **45** Security Features
- **46** Cleaning iPhone
- 46 Restarting and Resetting iPhone

47 Chapter 3: Phone

- 47 Phone Calls
- 51 Visual Voicemail
- 54 Contacts
- 54 Favorites
- 54 Ringtones and the Ring/Silent Switch

- 55 Bluetooth Devices
- 56 International Calls
- 59 Chapter 4: Mail
- **59** Setting Up Email Accounts
- 59 Sending Email
- 60 Checking and Reading Email
- **64** Searching Email
- **64** Organizing Email
- 66 Chapter 5: Safari
- 66 Viewing Webpages
- 69 Searching the Web
- **69** Bookmarks
- 70 Web Clips
- 71 Chapter 6: iPod
- 71 Getting Music, Video, and More
- 73 Music and Other Audio
- 81 Videos
- 84 Setting a Sleep Timer
- 85 Changing the Browse Buttons
- 86 Chapter 7: Messages
- 86 Sending and Receiving Messages
- 88 Sharing Photos and Videos
- 88 Sending Voice Memos
- 89 Editing Conversations
- 89 Using Contact Information and Links
- 90 Managing Previews and Alerts
- 91 Chapter 8: Calendar
- 91 About Calendar
- 91 Syncing Calendars
- **92** Viewing Your Calendar
- 93 Searching Calendars
- 93 Subscribing to and Sharing Calendars
- 94 Adding Calendar Events to iPhone
- 95 Responding to Meeting Invitations
- 96 Alerts
- 97 Chapter 9: Photos
- 97 About Photos
- 97 Syncing Photos and Videos with Your Computer

- 98 Viewing Photos and Videos
- 99 Slideshows
- 100 Sharing Photos and Videos
- **102** Assigning a Photo to a Contact
- 102 Wallpaper
- 103 Chapter 10: Camera
- 103 About Camera
- 104 Taking Photos and Recording Videos
- 105 Viewing and Sharing Photos and Videos
- **105** Trimming Videos
- 106 Uploading Photos and Videos to Your Computer
- 107 Chapter 11: YouTube
- 107 Finding and Viewing Videos
- 108 Controlling Video Playback
- 109 Managing Videos
- 109 Getting More Information
- 110 Using YouTube Account Features
- 111 Changing the Browse Buttons
- 111 Sending Videos to YouTube
- 112 Chapter 12: Stocks
- 112 Viewing Stock Quotes
- 113 Getting More Information
- 114 Chapter 13: Maps
- 114 Finding and Viewing Locations
- 119 Bookmarking Locations
- 119 Getting Directions
- **121** Showing Traffic Conditions
- 121 Finding and Contacting Businesses
- 123 Chapter 14: Weather
- **123** Viewing Weather Summaries
- **124** Getting More Weather Information
- 125 Chapter 15: Voice Memos
- 125 Recording Voice Memos
- 126 Listening to Voice Memos
- 127 Managing Voice Memos
- 128 Trimming Voice Memos
- 128 Sharing Voice Memos
- 129 Syncing Voice Memos

- 130 Chapter 16: Notes
- 130 Writing and Reading Notes
- 131 Searching Notes
- 131 Emailing Notes
- 131 Syncing Notes
- 132 Chapter 17: Clock
- 132 World Clocks
- 133 Alarms
- 133 Stopwatch
- 134 Timer
- 135 Chapter 18: Calculator
- 135 Using the Calculator
- 135 Standard Memory Functions
- 136 Scientific Calculator Keys
- 138 Chapter 19: Settings
- 138 Airplane Mode
- 139 Wi-Fi
- **140** VPN
- 140 Notifications
- 141 Carrier
- 141 Sounds and the Ring/Silent Switch
- 142 Brightness
- 142 Wallpaper
- 142 General
- 150 Mail, Contacts, Calendars
- 153 Phone
- 156 Safari
- 157 Messages
- 158 iPod
- 159 Photos
- **159** Store
- 159 Nike + iPod
- 160 Chapter 20: iTunes Store
- 160 About the iTunes Store
- 161 Finding Music, Videos, and More
- **162** Purchasing Ringtones
- **162** Purchasing Music or Audiobooks
- **163** Purchasing or Renting Videos
- 164 Streaming or Downloading Podcasts

- **165** Checking Download Status
- **165** Syncing Purchased Content
- 165 Changing the Browse Buttons
- 166 Viewing Account Information
- **166** Verifying Purchases

167 Chapter 21: App Store

- 167 About the App Store
- **167** Browsing and Searching
- 169 Info Screen
- 170 Downloading Applications
- 171 Deleting Applications
- 171 Writing Reviews
- 172 Updating Applications
- 172 Syncing Purchased Applications

173 Chapter 22: Compass

- 173 Getting Compass Readings
- 174 Compass and Maps

176 Chapter 23: Contacts

- 176 About Contacts
- 176 Adding Contacts
- 177 Searching Contacts
- 178 Managing Contacts on iPhone

180 Chapter 24: Nike + iPod

- 180 Activating Nike + iPod
- 181 Additional Nike + iPod Settings

182 Chapter 25: Accessibility

- 182 Accessibility Features
- 183 VoiceOver
- **189** Zoom
- 190 White on Black
- 190 Mono Audio
- 190 Speak Auto-text
- **191** Triple-click Home
- 191 Closed Captioning and Other Helpful Features

193 Appendix A: Troubleshooting

- 193 Apple iPhone Support Site
- 193 General
- **195** iTunes and Syncing

SoftView Exhibit 2019-6 Kyocera Corp. v. SoftView LLC IPR2013-00007

- 196 Phone and Voicemail
- 197 Safari, Text, Mail, and Contacts
- 200 Sound, Music, and Video
- 201 iTunes Stores
- 201 Removing the SIM Card
- 202 Backing Up iPhone
- 204 Updating and Restoring iPhone Software
- 205 Appendix B: Other Resources
- 205 Safety, Software, and Service Information
- 206 Viewing the User Guide on iPhone
- 206 Disposal and Recycling Information
- 207 Apple and the Environment
- 208 Index

Safari 5



Viewing Webpages

Safari lets you surf the web and view webpages on iPhone in the same way as if you were on your computer. You can create bookmarks on iPhone and sync bookmarks with your computer. Add web clips for quick access to your favorite sites directly from the Home screen.

You can view webpages in either portrait or landscape orientation. Rotate iPhone and the webpage rotates too, automatically adjusting to fit the page.



Opening Webpages

Open a webpage: Tap the address field (on the left side of the title bar), then type the web address and tap Go. If the address field isn't visible, tap the status bar at the top of the screen to quickly scroll to the address field at the top of the webpage.

As you type, web addresses that start with those letters appear. These are bookmarked pages or recent pages you've opened. Tap an address to go to that page. Keep typing if you want to enter a web address that's not in the list.

Erase the text in the address field: Tap the address field, then tap \otimes .

SoftView Exhibit 2019-8 Kyocera Corp. v. SoftView LLC IPR2013-00007

Zooming and Scrolling

Zoom in or out: Double-tap a column on a webpage to expand the column. Double-tap again to zoom out.



You can also pinch to zoom in or out manually.

Scroll around a webpage	Drag up, down, or sideways. When scrolling, you can touch and drag anywhere on the page without activating any links.
Scroll within a frame on a webpage	Use two fingers to scroll within a frame on a webpage. Use one finger to scroll the entire webpage.
Scroll quickly to the top of a webpage	Tap the status bar at the top of the iPhone screen.

Navigating Webpages

Links on webpages typically take you to another place on the web.

Follow a link on a webpage: Tap the link.

Links on iPhone can also initiate a phone call, display a location in Maps, or create a preaddressed Mail message. To return to Safari after a link opens another application, press the Home

button and tap Safari.

See a link's destination address	Touch and hold the link. The address pops up next to your finger. You can touch and hold an image to see if it has a link.	
Stop a webpage from loading	Тар 🗙.	
Reload a webpage	Тар С .	
Return to the previous or next page	Tap \blacktriangleleft or \blacktriangleright at the bottom of the screen.	
Return to a recently viewed page	Tap 🏔 and tap History. To clear the history list, tap Clear.	
Send a webpage address via email	Tap 🕂 and tap "Mail Link to this Page."	
Save an image or photo to your Camera Roll album	Touch and hold the image, then tap Save Image.	

Opening Multiple Pages

You can have up to eight pages open at a time. Some links automatically open a new page instead of replacing the current one.

The number inside the pages icon at the bottom of the screen shows how many pages are open. If there's no number inside, just one page is open. For example:

 \Box = one page is open

(3) = three pages are open

Open a new page: Tap 🗅 and tap New Page.

Go to another page: Tap and flick left or right. Tap the page you want to view.



Close a page: Tap 🗖 and tap 🔕. You can't close a page if it's the only one open.

Entering Text and Filling Out Forms

Some webpages have text fields and forms to fill out. You can set Safari to remember names and passwords of websites you visit and fill out text fields automatically with information from Contacts. See "Safari" on page 156.

Bring up the keyboard	Tap inside a text field.	
Move to another text field	Tap another text field, or tap the Next or Previous button.	
Submit a form	Once you finish filling out a form, tap Go or Search. Most pages also have a link you can tap to submit the form.	
Close the keyboard without submitting the form	Tap Done.	

Enable AutoFill to help you fill out web forms: In Settings, choose Safari > AutoFill, then do one of the following:

- To use information from contacts, turn Use Contact Info on, then choose My Info and select the contact you want to use.
 - Safari uses information from Contacts to fill in contact fields on web forms.
- To use information from names and passwords, turn Names & Passwords on.

 When this feature is on, Safari remembers names and passwords of websites you visit and automatically fills in the information when you revisit the website.
- To remove all AutoFill information, tap Clear All.

Searching the Web

By default, Safari searches using Google. You can search using Yahoo!, instead.

Search the web:

- 1 Tap the search field (on the right side of the title bar).
- 2 Type a word or phrase that describes what you're looking for, then tap Google.
- 3 Tap a link in the list of search results to open a webpage.

Set Safari to search using Yahoo!: From the Home screen choose Settings > Safari > Search Engine, then choose Yahoo!.

Bookmarks

You can bookmark webpages you want to return to later.

Bookmark a webpage: Open the page and tap **+**. Then tap Add Bookmark.

When you save a bookmark you can edit its title. By default, bookmarks are saved at the top level of Bookmarks. Tap Bookmarks to choose another folder.

If you use Safari on a Mac, or Safari or Microsoft Internet Explorer on a PC, you can sync bookmarks with the web browser on your computer.

Sync bookmarks with your computer:

- 1 Connect iPhone to your computer.
- 2 In iTunes, select iPhone in the sidebar.
- 3 Click the Info tab, select "Sync ... bookmarks" under Web Browser, then click Apply.

See "Syncing" on page 11.

Sync bookmarks with MobileMe: In Settings on iPhone, select Bookmarks in your MobileMe account. See "Setting Up Accounts" on page 16.

Open a bookmarked webpage: Tap \square , then choose a bookmark or tap a folder to see the bookmarks inside.

SoftView Exhibit 2019-11 Kyocera Corp. v. SoftView LLC IPR2013-00007 Edit a bookmark or bookmark folder: Tap \square , choose the folder that has the bookmark or folder you want to edit, then tap Edit. Then do one of the following:

- To make a new folder, tap New Folder.
- To delete a bookmark or folder, tap 🖨, then tap Delete.
- To reposition a bookmark or folder, drag ≡.
- To edit the name or address, or to put it in a different folder, tap the bookmark or folder.

When you're finished, tap Done.

Web Clips

Add web clips to the Home screen for fast access to your favorite webpages. Web clips appear as icons on the Home screen, and you can arrange your web clips along with the other icons. See "iPhone Applications" on page 23.

Add a web clip: Open the webpage and tap +. Then tap "Add to Home Screen."

When you open a web clip, Safari automatically zooms and scrolls to the area of the webpage that was displayed when you saved the web clip. The displayed area is also used to create the icon for the web clip on your Home screen, unless the webpage comes with its own custom icon.

When you add a web clip, you can edit its name. If the name is too long (more than about 10 characters), it may appear abbreviated on the Home screen.

Web clips aren't bookmarks, and aren't synced by MobileMe or iTunes.

Delete a web clip:

- 1 Touch and hold any icon on the Home screen until the icons start to wiggle.
- 2 Tap **②** in the corner of the web clip you want to delete.
- 3 Tap Delete, then press the Home 🗆 button to save your arrangement.

É Apple Inc.

© 2009 Apple Inc. All rights reserved.

Apple, the Apple logo, Cover Flow, iCal, iPhoto, iPod, iTunes, Keynote, Mac, Macintosh, Mac OS, Numbers, Pages, Safari, and Spotlight are trademarks of Apple Inc., registered in the U.S. and other countries.

Finder, iPhone, Multi-Touch, and Shuffle are trademarks of Apple Inc.

iTunes Store is a service mark of Apple Inc., registered in the U.S. and other countries.

App Store and MobileMe are service marks of Apple Inc.

The Nike + iPod Sport Kit is covered by one or more of U.S. patent numbers 6,018,705, 6,052,654, 6,493,652, 6,298,314, 6,611,789, 6,876,947, and 6,882,955, either alone or when used in combination with a Nike + iPod enabled iPod media player or iPhone 3GS.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Apple Inc. is under license.

Adobe and Photoshop are trademarks or registered trademarks of Adobe Systems Incorporated in the U.S. and/or other countries.

Other company and product names mentioned herein may be trademarks of their respective companies.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Apple assumes no responsibility with regard to the performance or use of these products. All understandings, agreements, or warranties, if any, take place directly between the vendors and the prospective users. Every effort has been made to ensure that the information in this manual is accurate. Apple is not responsible for printing or clerical errors.

019-1650/2009-09