

2006 Civic Hybrid Online Reference Owner's Manual

Use these links (and links throughout this manual) to navigate through this reference.
For a printed owner's manual, click on authorized manuals or go to www.helminc.com.

Contents

Owner's Identification Form

| | |
|--|------------|
| Introduction | i |
| A Few Words About Safety | ii |
| Your Vehicle at a Glance | 3 |
| Driver and Passenger Safety | 5 |
| Proper use and care of your vehicle's seat belts, and Supplemental Restraint System. | |
| Instruments and Controls | 55 |
| Instrument panel indicator and gauge, and how to use dashboard and steering column controls. | |
| Comfort and Convenience Features | 99 |
| How to operate the climate control system, the audio system, and other convenience features. | |
| Before Driving | 149 |
| What gasoline to use, how to break-in your new vehicle, and how to load luggage and other cargo. | |
| Driving | 163 |
| The proper way to start the engine, shift the transmission, and park, plus towing a trailer. | |
| Maintenance | 177 |
| The Maintenance Schedule shows you when you need to take your vehicle to the dealer. | |
| Taking Care of the Unexpected | 215 |
| This section covers several problems motorists sometimes experience, and how to handle them. | |
| Technical Information | 239 |
| ID numbers, dimensions, capacities, and technical information. | |
| Warranty and Customer Relations (U.S. and Canada) | 251 |
| A summary of the warranties covering your new Acura, and how to contact us. | |
| Authorized Manuals (U.S. only) | 255 |
| How to order manuals and other technical literature. | |
| Index | I |

Service Information Summary

A summary of information you need when you pull up to the fuel pump.

Owner's Identification

OWNER _____

ADDRESS _____

STREET

CITY

STATE/PROVINCE

ZIP CODE/
POSTAL CODE

V. I. N. _____

DELIVERY DATE _____

(Date sold to original retail purchaser)

DEALER NAME _____ DEALER NO. _____

ADDRESS _____

STREET

CITY

STATE/PROVINCE

ZIP CODE/
POSTAL CODE

OWNER'S SIGNATURE _____

DEALER'S SIGNATURE _____

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold.

This owner's manual covers all models of the Civic Hybrid. You may find descriptions of equipment and features that are not on your particular model.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation whatsoever.

IPR2025-00153

Tesla EX1034 Page 2

Congratulations! Your selection of a 2006 Honda Civic Hybrid was a wise investment. It will give you years of driving pleasure.

One of the best ways to enhance the enjoyment of your new vehicle is to read this manual. In it, you will learn how to operate its driving controls and convenience items. Afterwards, keep this owner's manual in your vehicle so you can refer to it at any time.

Several warranties protect your new vehicle. Read the warranty booklet thoroughly so you understand the coverages and are aware of your rights and responsibilities.

Maintaining your vehicle according to the schedules given in this manual helps to keep your driving trouble-free while it preserves your investment. When your vehicle needs maintenance, keep in mind that your dealer's staff is specially trained in servicing the many systems unique to your vehicle. Your dealer is dedicated to your satisfaction and will be pleased to answer any questions and concerns.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your vehicle, other property, or the environment.


California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

Event Data Recorders

This vehicle is equipped with one or more recording devices commonly referred to as event data recorders or sensing and diagnostic modules.

IMA Battery Level Gauge

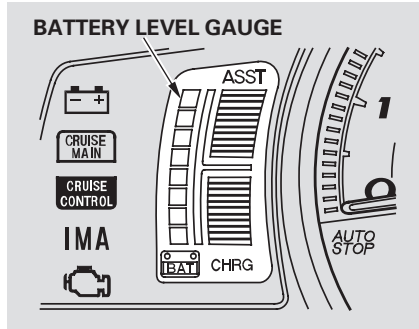

This gauge shows you the state of charge of the battery for the Integrated Motor Assist (IMA). This battery is recharged by the engine, and discharged by the IMA when it is assisting the engine with powering the vehicle.

The gauge reading may drop near the bottom under driving conditions that require IMA motor assistance for a long time, such as prolonged

acceleration or climbing a long hill. The engine will recharge the battery as you continue driving.

If the battery is mostly discharged, the auto idle stop function is disabled (see page 170).


The battery level gauge does not read the battery level directly. It calculates the level by continuously measuring the current flow, voltage, and temperature.

Since the level is not read directly, small sensing errors can, over time, cause the gauge to read higher than the actual battery level. The system will then perform a correction, and the battery level gauge reading will drop suddenly. When this happens, IMA assist and Auto Idle Stop are disabled until the IMA battery is sufficiently recharged by normal driving. This should take only a few minutes.

This correction of the battery level gauge is normal and does not indicate a problem. If the IMA battery develops a problem or becomes deteriorated, the IMA system indicator will come on. If this happens, have the vehicle checked by your dealer as soon as possible.

Gauges

Charge/Assist Gauge

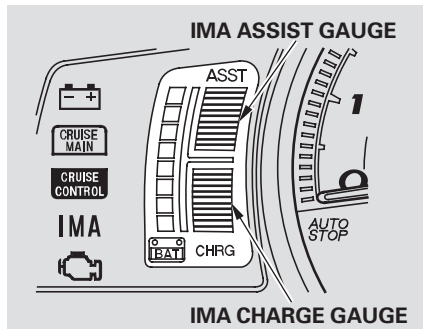


This gauge shows you the status of the Integrated Motor Assist (IMA). When the IMA battery is being charged, the bottom side of the gauge illuminates. When the IMA is assisting the engine, the upper side of the gauge illuminates.

If the IMA battery is too hot or too cold, the IMA system limits the IMA battery's output power to protect the battery. This disables the IMA assist and Auto Idle Stop, even though the Battery Level Gauge may show that the battery is well-charged. Therefore, if the motor assist is frequently used, the battery becomes hot and starts to limit its output power.

It takes the IMA system a few minutes in cold weather to normalize the IMA battery's output power, and about 15 minutes in hot weather.

Vents, Heating, and A/C

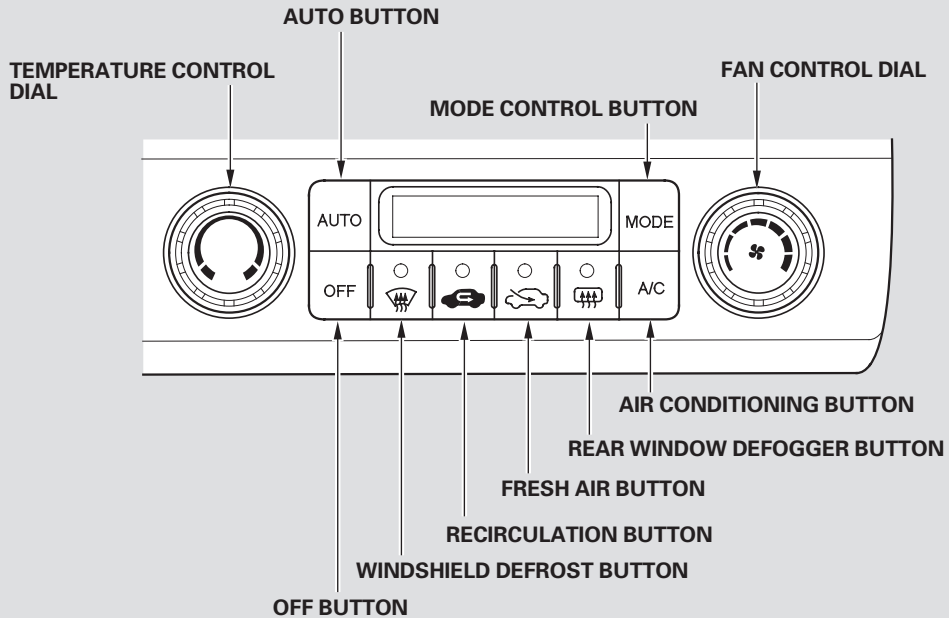

Voice Control System

Only on models equipped with Navigation System

The climate control system for your vehicle can also be operated using the voice control system. See Navigation section in your Quick Start Guide for an overview of this system and the Navigation System manual for complete details.

Fan Control Dial

Turn this dial to increase or decrease the fan speed and airflow. When the dial is set to AUTO, the system controls the fan speed automatically.

Temperature Control Dial

Turning this dial clockwise increases the temperature of the airflow.

Air Conditioning (A/C) Button

This button turns the air conditioning on and off. The indicator in the button is on when the A/C is on.

Recirculation Button

When the recirculation indicator is on, air from the vehicle's interior is sent throughout the system again. To select recirculation mode when driving through dusty or smoky conditions, then return to fresh air mode.

Fresh Air Button

The outside air intakes for the heating and cooling system are at the base of the windshield. Keep this area clear of leaves and other debris.


When the fresh air indicator is on, air is brought in from the outside of the vehicle.

The system should be left in fresh air mode under almost all conditions. Keeping the system in recirculation mode, particularly with the A/C off, can cause the windows to fog up.

Mode Control Button

Use the mode control button to select the vents the air flows from. Some air will flow from the dashboard vents in all modes.

 Air flows from the center and corner vents in the dashboard.


 Airflow is divided between the vents in the dashboard and the floor vents.

 Air flows from the floor vents.

CONTINUED

Fuse Locations

INTERIOR FUSE BOX

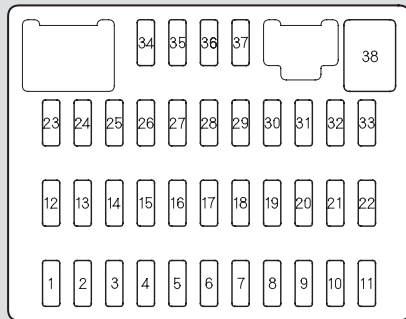

| No. | Amps. | Circuits Protected |
|-----|-------|--------------------|
| 1 | 7.5 A | Power Window |
| 2 | 15 A | Fuel Pump |
| 3 | 10 A | Alternator |
| 4 | 7.5 A | ABS Unit |
| 5 | — | Not Used |
| 6 | — | Not Used |
| 7 | — | Not Used |
| 8 | — | Not Used |

| No. | Amps. | Circuits Protected |
|-----|-------|----------------------|
| 9 | 7.5 A | ODS |
| 10 | 7.5 A | METER |
| 11 | 10 A | SRS |
| 12 | 10 A | Right Headlight High |
| 13 | 10 A | Left Headlight High |
| 14 | 7.5 A | Small (Interior) |
| 15 | 7.5 A | Small (Exterior) |
| 16 | 10 A | Right Headlight Low |

| No. | Amps. | Circuits Protected |
|-----|---------|--------------------------|
| 17 | 10 A | Left Headlight Low |
| 18 | 20 A | Headlight High Main |
| 19 | 15 A | Small (Main) |
| 20 | — | Not Used |
| 21 | 20 A | Headlight Low Main |
| 22 | (7.5 A) | (HAC)* |
| 23 | (7.5 A) | STS* |
| 24 | — | Not Used |
| 25 | 20 A | Door Lock |
| 26 | 20 A | Driver's Power Window |
| 27 | — | Not Used |
| 28 | (15 A) | Rear ACC Socket |
| 29 | 15 A | ACC |
| 30 | 20 A | Passenger's Power Window |
| 31 | — | Not Used |
| 32 | 20 A | Right Rear Power Window |
| 33 | 20 A | Left Rear Power Window |
| 34 | — | Not Used |
| 35 | 7.5 A | ACC Radio |
| 36 | 10 A | HAC |
| 37 | 7.5 A | Daytime Running Light |
| 38 | 30 A | Wiper |

* : If equipped

| A | |
|--|-------|
| Accessories..... | 156 |
| ACCESSORY (Ignition Key Position)..... | 79 |
| Accessory Power Socket | 96 |
| Additives, Engine Oil..... | 190 |
| Airbag (SRS) | 9, 21 |
| Airbags, Additional Information ... | 21 |
| Additional Safety Precautions.... | 32 |
| Advanced Airbag System | 28 |
| Airbag Service..... | 32 |
| How the Passenger Airbag Off Indicator Works..... | 31 |
| How the Side Airbag Off Indicator Works..... | 30 |
| How the SRS Indicator Works... | 30 |
| How Your Front Airbags Work..... | 24 |
| How Your Side Airbags Work... | 28 |
| How Your Side Curtain Airbags Work..... | 31 |
| SRS Components | 21 |
| Air Conditioning System..... | 100 |
| Air Pressure, Tires | 208 |
| Antifreeze | 192 |

| | |
|--|----------|
| Anti-lock Brakes (ABS) Indicator..... | 59, 174 |
| Operation..... | 174 |
| Anti-theft, Audio System..... | 142 |
| Anti-theft Steering Column Lock..... | 79 |
| Armrest..... | 91 |
| Audio System | 106 |
| Auto Door Locking/Unlocking..... | 81 |
| Auto Door Locking..... | 81 |
| Auto Door Unlocking..... | 83 |
| Auto Idle Stop..... | 170, 171 |
| Automatic Seat Belt Tensioners ... | 19 |
| Automatic Speed Control..... | 145 |
| Automatic Transmission (CVT) .. | 166 |
| Capacity, Fluid | 242 |
| Checking Fluid Level..... | 195 |
| Shifting..... | 167 |
| Shift Lever Position Indicators..... | 166 |
| Shift Lever Positions..... | 167 |
| Shift Lock Release..... | 169 |

| B | |
|--|-------------|
| Battery Charging System Indicator..... | 57, 228 |
| Jump Starting | 223 |
| Maintenance..... | 212 |
| Specifications | 243 |
| Before Driving | 149 |
| Belts, Seat..... | 8, 18 |
| Beverage Holder..... | 96 |
| Brakes Anti-lock System (ABS)..... | 174 |
| Break-in, New Linings | 150 |
| Bulb Replacement | 200 |
| Fluid | 196 |
| Pad Wear Indicator..... | 174 |
| Parking..... | 94 |
| System Indicator..... | 58, 63, 230 |
| Braking System..... | 173 |
| Break-in, New Vehicle | 150 |
| Brightness Control, Instruments... | 74 |
| Brights, Headlights | 73 |

CONTINUED

Index

| | |
|--------------------------------|----------|
| Bulb Replacement | |
| Back-up Lights | 201 |
| Brake Lights | 200, 201 |
| Front Side Marker Lights | 199 |
| Front Turn Signal Light | 199 |
| Headlights | 197 |
| Parking Lights | 199 |
| Rear Side Marker Lights | 200 |
| Rear Turn Signal Lights | 200 |
| Specifications | 243 |
| Bulbs, Halogen | 197 |

C

| | |
|-------------------------------|-----|
| Card, PC | 129 |
| Capacities Chart | 242 |
| Carbon Monoxide Hazard | 52 |
| Carrying Cargo | 158 |
| CAUTION, Explanation of | ii |
| CD Player | 112 |
| Ceiling Light | 97 |
| Certification Label | 240 |
| Chains | 211 |
| Changing a Flat Tire | 217 |
| Changing Oil | |
| How to | 190 |

| | |
|------------------------------------|---------|
| When to | 179 |
| Charging System Indicator | 62, 228 |
| Check Fuel Cap Indicator | 68 |
| Checklist, Before Driving | 164 |
| Child Safety | 34 |
| Child Seats | |
| LATCH Anchor System | 43 |
| Lower Anchor | 43 |
| Tether Anchor | 46 |
| Childproof Door Locks | 81 |
| Clock, Setting the | 119 |
| CO in the Exhaust | 247 |
| Cold Weather, Starting in | 165 |
| Compact Spare | 216 |
| Consumer Information | 252 |
| Controls, Instruments and | 55 |
| Coolant | |
| Adding | 192 |
| Checking | 154 |
| Proper Solution | 192 |
| Temperature Gauge | 67 |
| Crankcase Emissions Control | |
| System | 247 |
| Cruise Control Operation | 145 |
| Customer Service Information | 252 |

D

| | |
|----------------------------------|-------|
| DANGER, Explanation of | ii |
| Dashboard | 3, 56 |
| Daytime Running Lights | 73 |
| Defects, Reporting Safety* | 254 |
| Defog and Defrost | 103 |
| Defogger, Rear Window | 75 |
| Defrosting the Windows | 103 |
| Dimensions | 242 |
| Dimming the Headlights | 73 |
| Dipstick | |
| Automatic Transmission | 195 |
| Engine Oil | 154 |
| Directional Signals | 73 |
| Disc Brake Pad Wear | |
| Indicators | 173 |
| Disc Player | 112 |
| Display Change Button | 64 |
| Disposal of Used Oil | 192 |
| Doors | |
| Auto Door Locking/Unlocking .. | 81 |
| Auto Door Locking | 81 |
| Auto Door Unlocking | 83 |
| Locking and Unlocking | 80 |
| Power Door Locks | 80 |

DOT Tire Quality Grading* 244
 Driver and Passenger Safety..... 5
 Driving 163
 Economy 154
 Dust and Pollen Filter 204

E

Economy, Fuel 154
 Emergencies on the Road..... 215
 Battery, Jump Starting 223
 Brake System Indicator 230
 Changing a Flat Tire 217
 Charging System Indicator 228
 Checking the Fuses..... 213
 Low Oil Pressure Indicator 227
 Malfunction Indicator Lamp 229
 Overheated Engine 225
 Emergency Brake..... 94
 Emergency Flashers 74
 Emergency Towing 237
 Emergency Trunk Opener 86
 Emissions Controls..... 247
 Emissions Testing, State 250
 Engine
 Coolant Temperature Gauge 67

Engine Speed Limiter 168
 Malfunction Indicator
 Lamp 62, 229
 Oil Pressure Indicator 62, 227
 Oil, What Kind to Use..... 189
 Overheating..... 225
 Specifications 242
 Starting..... 165
 Evaporative Emissions Controls.. 247
 Exhaust Fumes 52
 Expectant Mothers, Use of Seat
 Belts by 16

F

Fan, Interior..... 101
 Features 99
 Filling the Fuel Tank..... 151
 Filters
 Dust and Pollen..... 204
 Oil 190
 Flashers, Hazard Warning..... 74
 Flat Tire, Changing a 217
 Fluids
 Automatic Transmission..... 195
 Brake..... 196

Windshield Washer 194
 FM Stereo Radio
 Reception..... 139
 Four-way Flashers 74
 Front Airbags 9, 21
 Fuel..... 150
 Fill Door and Cap..... 151
 Gauge 66
 Octane Requirement 150
 Oxygenated 150
 Reserve Indicator..... 61
 Tank, Filling the..... 151
 Fuses, Checking the..... 231

G

Gas Mileage, Improving..... 154
 Gasohol 150
 Gasoline 150
 Fuel Reserve Indicator..... 61
 Gauge 66
 Octane Requirement 150
 Tank, Filling the..... 151
 Gas Station Procedures..... 151

CONTINUED

Index

Gauges

| | |
|---------------------------------|-----|
| Engine Coolant Temperature | 67 |
| Fuel..... | 66 |
| Gearshift Lever Positions | |
| Automatic Transmission..... | 166 |
| Glove Box | 96 |

H

| | |
|---------------------------------|-----|
| Halogen Headlight Bulbs..... | 197 |
| Hazard Warning Flashers..... | 74 |
| Headlights | |
| Aiming..... | 197 |
| Daytime Running Lights..... | 73 |
| High Beam Indicator..... | 60 |
| Reminder Beeper..... | 73 |
| Replacing Halogen Bulbs | 197 |
| Turning on..... | 73 |
| Head Restraints | 91 |
| Heated Mirrors | 94 |
| Heating and Cooling..... | 100 |
| High Altitude, Starting at..... | 165 |
| High-Low Beam Switch | 73 |
| Hood, Opening the | 152 |
| Horn..... | 71 |

I

| | |
|------------------------------------|-----|
| Identification Number, Vehicle.... | 240 |
| Ignition | |
| Keys..... | 76 |
| Switch..... | 79 |
| Timing Control System..... | 248 |
| Important Safety Precautions | 6 |
| Indicators, Instrument Panel..... | 55 |
| Infant Restraint | 39 |
| Infant Seats | |
| LATCH Anchorage System | 43 |
| Lower Anchors | 43 |
| Tether Anchors..... | 46 |
| Inflation, Recommended Tire | 208 |
| Pressures | 203 |
| Information Display..... | 64 |
| Inside Mirror | 93 |
| Inspection, Tire | 209 |
| Instrument Panel..... | 57 |
| Instrument Panel Lights..... | 58 |
| Instrument Panel Brightness | 74 |
| Interior Lights..... | 97 |
| Introduction..... | i |

J

| | |
|------------------------------|-----|
| Jacking up the Vehicle | 217 |
| Jack, Tire | 217 |
| Jump Starting | 223 |

K

| | |
|-----------|----|
| Keys..... | 76 |
|-----------|----|

L

| | |
|------------------------------------|--------|
| Label, Certification | 240 |
| Lane Change, Signaling | 73 |
| Lap/Shoulder Belts | 14, 18 |
| LATCH Anchorage System..... | 43 |
| Lights | |
| Bulb Replacement | 197 |
| Indicator..... | 60 |
| Parking..... | 73 |
| Turn Signal..... | 73 |
| Load Limits..... | 159 |
| LOCK (Ignition Key Position) | 79 |
| Locks | |
| Anti-theft Steering Column | 79 |
| Fuel Fill Door | 151 |

Power Door 80
 Trunk 86
 Low Coolant Level..... 154
 Low Fuel Indicator 61
 Lower Anchors..... 43
 Low Oil Pressure Indicator 62, 227
 Lubricant Specifications Chart 242

M

Maintenance..... 177
 Minder..... 179
 Minder Indicator..... 61
 Owner's Maintenance
 Checks 184
 Record..... 186-187
 Safety..... 178
 Malfunction Indicator Lamp .. 62, 229
 Meters, Gauges.....57, 64
 Methanol in Gasoline150
 Mirrors, Adjusting..... 93
 MP3/WMA.....112

N

Neutral Gear Position..... 168

New Vehicle Break-in 150
 NOTICE, Explanation of..... i
 Numbers, Identification..... 240

O

Octane Requirement, Gasoline.... 150
 Odometer 64
 Odometer, Trip 64
 Oil
 Change, How to 190
 Change, When to 179
 Checking Engine 153
 Pressure Indicator 62, 227
 Selecting Proper Viscosity..... 189
 ON (Ignition Key Position) 79
 Onboard Refueling Vapor
 Recovery 247
 Outside Mirrors 93
 Outside Temperature Indicator 67
 Overheating, Engine 225
 Owner's Maintenance Checks 184
 Oxygenated Fuels..... 150

P

Panel Brightness Control 74
 Park Gear Position..... 167
 Parking 172
 Parking Brake 94
 Parking Brake and Brake
 System Indicator 58, 230
 Parking Lights..... 73
 Parking Over Things that Burn... 172
 PGM-FI System..... 248
 Playing the Radio..... 109
 Playing a Disc..... 112
 Playing a PC Card..... 129
 Pregnancy, Using Seat Belts 16
 Protecting Adults and Teens..... 11
 Additional Safety Precautions... 17
 Advice for Pregnant Women..... 16
 Protecting Children 34
 General Guidelines 34
 Protecting Infants 39
 Protecting Small Children 40
 Selecting a Child Seat..... 41
 Installing a Child Seat 42

CONTINUED

Index

Protecting Larger Children..... 48

R

Radiator Overheating..... 225

Radio/CD/Sound System..... 106

Radio/CD/PC Card Sound System..... 121

Readiness Codes..... 229, 250

Rear Lights, Bulb Replacement..... 200, 201

Rear View Mirror..... 93

Rear Window Defogger..... 75

Reclining the Seat-backs..... 89

Reminder Lights..... 61

Remote Transmitter..... 87

Replacement Information

Dust and Pollen Filter..... 204

Engine Oil and Filter..... 190

Fuses..... 232

Light Bulbs..... 197

Maintenance Minder..... 179

Tires..... 207

Wiper Blades..... 205

Replacing Seat Belts After a Crash..... 20

Reserve Tank, Engine

Coolant..... 153, 192

Restraint, Child..... 34

Reverse Gear Position..... 168

Rotation, Tire..... 210

S

Safety Belts..... 8, 18

Safety Defects, Reporting*..... 254

Safety Features..... 7

Airbags..... 9

Seat Belts..... 8

Safety Labels, Location of..... 53

Safety Messages..... ii

Seat Belts..... 8, 18

Additional Information..... 18

Automatic Seat Belt

Tensioners..... 19

Lap/Shoulder Belt..... 14, 18

Maintenance..... 20, 203

Reminder Light and

Beeper..... 18, 59

System Components..... 18

Use During Pregnancy..... 16

Wearing a Lap/Shoulder

Belt..... 14, 18

Seats, Adjusting the..... 89

Security System..... 144

Serial Number..... 240

Service Intervals..... 185

Service Manual*..... 255

Service Station Procedures..... 151

Setting the Clock..... 119

Shift Lever Position Indicators..... 166

Shift Lock Release..... 169

Side Airbags..... 9, 28

Off Indicator..... 30, 59

Side Curtain Airbags..... 29

Side Marker Lights, Bulb

Replacement..... 199

Signaling Turns..... 73

Snow Tires..... 211

Sound System..... 106

Spare Tire

Inflating..... 216

Specifications..... 243

Specifications Charts..... 242

Speed Control..... 145

Speed-Sensitive Volume

Compensation (SVC)..... 111, 124

Index

| | |
|-----------------------------|----------|
| Transmission | |
| Checking Fluid Level, | |
| Automatic | 195 |
| Fluid Selection | 195, 196 |
| Identification Number..... | 241 |
| Shifting the Automatic..... | 166 |
| Treadwear* | 244 |
| Trip Meter | 65 |
| Trunk..... | 86 |
| Opening..... | 86 |
| Open Monitor Light | 60 |
| Turn Signals | 73 |

U

| | |
|------------------------------------|-----|
| Unexpected, Taking Care | |
| of the | 215 |
| Uniform Tire Quality Grading | 244 |
| Unleaded Gasoline..... | 150 |
| Used Oil, How to Dispose of | 192 |

V

| | |
|-----------------------------|-----|
| Vanity Mirror | 95 |
| Vehicle Capacity Load | 159 |
| Vehicle Dimensions..... | 242 |

| | |
|------------------------------------|-----|
| Vehicle Identification Number..... | 240 |
| Vehicle Storage | 213 |
| Ventilation | 102 |
| VIN | 240 |
| Viscosity, Oil..... | 189 |

W

| | |
|-----------------------------------|-----|
| WARNING, Explanation of | ii |
| Warning Labels, Location of | 53 |
| Warranty Coverages | 253 |
| Washer, Windshield | |
| Checking the Fluid Level | 194 |
| Indicator..... | 61 |
| Operation..... | 72 |
| Wheels | |
| Adjusting the Steering | 75 |
| Alignment and Balance..... | 209 |
| Compact Spare..... | 216 |
| Nut Wrench..... | 217 |
| Windows | |
| Operating the Power | 92 |
| Rear, Defogger | 75 |
| Windshield | |
| Cleaning..... | 72 |
| Defroster | 103 |

| | |
|--------------------------------|-----|
| Washers | 72 |
| Wipers, Windshield | |
| Changing Blades..... | 205 |
| Operation | 72 |
| Worn Tires | 207 |
| Wrecker, Emergency Towing..... | 237 |

*: U.S. only

Service Information Summary

Gasoline:

Unleaded gasoline, pump octane number of 87 or higher.

Fuel Tank Capacity:

12.4 US gal (47 ℓ)

Recommended Engine Oil:

API Premium grade 0W-20 detergent oil (see page [189](#)).

Oil change capacity (including filter):

3.4 US qt (3.2 ℓ)

Automatic Transmission Fluid (CVT):

Use Honda CVT Fluid (Continuously Variable Transmission Fluid) only

Capacity:

3.0 US qt (2.8 ℓ)

Brake Fluid:

Honda Heavy Duty Brake Fluid DOT 3 preferred, or a DOT 3 or DOT 4 brake fluid as a temporary replacement (see page [196](#)).

Tire Pressure (measured cold):

Front/Rear:

32 psi (220 kPa , 2.2 kgf/cm²)

Spare Tire:

60 psi (420 kPa , 4.2 kgf/cm²)