

## 2000 Insight Online Reference Owner's Manual

Use these links (and links throughout this manual) to navigate through this reference.  
For a printed owner's manual, click on authorized manuals or go to [www.helminc.com](http://www.helminc.com).

## Contents

### Owner's Identification Form

<b>Introduction</b> .....	<b>i</b>
<b>A Few Words About Safety</b> .....	<b>ii</b>
<b>Your Car at a Glance</b> .....	<b>2</b>
<b>Driver and Passenger Safety</b> .....	<b>5</b>
Proper use and care of your vehicle's seat belts, and Supplemental Restraint System.	
<b>Instruments and Controls</b> .....	<b>43</b>
Instrument panel indicator and gauge, and how to use dashboard and steering column controls.	
<b>Comfort and Convenience Features</b> .....	<b>81</b>
How to operate the climate control system, the audio system, and other convenience features.	
<b>Before Driving</b> .....	<b>117</b>
What gasoline to use, how to break-in your new vehicle, and how to load luggage and other cargo.	
<b>Driving</b> .....	<b>131</b>
The proper way to start the engine, shift the transmission, and park, plus towing a trailer.	
<b>Maintenance</b> .....	<b>145</b>
The Maintenance Schedule shows you when you need to take your vehicle to the dealer.	
<b>Appearance Care</b> .....	<b>197</b>
Tips on cleaning and protecting your vehicle. Things to look for if your vehicle ever needs body repairs.	
<b>Taking Care of the Unexpected</b> .....	<b>205</b>
This section covers several problems motorists sometimes experience, and how to handle them.	
<b>Technical Information</b> .....	<b>231</b>
ID numbers, dimensions, capacities, and technical information.	
<b>Warranty and Customer Relations (U.S. and Canada)</b> .....	<b>243</b>
A summary of the warranties covering your new Acura, and how to contact us.	
<b>Authorized Manuals (U.S. only)</b> .....	<b>249</b>
How to order manuals and other technical literature.	
<b>Index</b> .....	<b>I</b>

### Service Information Summary

A summary of information you need when you pull up to the fuel pump.

## Owner's Identification

OWNER \_\_\_\_\_  
\_\_\_\_\_

ADDRESS \_\_\_\_\_  
STREET

\_\_\_\_\_ CITY STATE/PROVINCE ZIP CODE /  
POSTAL CODE

V. I. N. \_\_\_\_\_

DELIVERY DATE \_\_\_\_\_  
(Date sold to original retail purchaser)

DEALER NAME \_\_\_\_\_ DEALER NO. \_\_\_\_\_

ADDRESS \_\_\_\_\_  
STREET

\_\_\_\_\_ CITY STATE/PROVINCE ZIP CODE /  
POSTAL CODE

OWNERS SIGNATURE \_\_\_\_\_

DEALER'S SIGNATURE \_\_\_\_\_

This Owner's Manual should be considered a permanent part of the car, and should remain with the car when it is sold.

The information and specifications contained in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice, and without incurring any obligation.


Congratulations ! Your selection of a 2000 Honda Insight was a wise investment. It will give you years of driving pleasure.

One of the best ways to enhance the enjoyment of your new Honda is to read this manual. In it, you will learn how to operate its driving controls and convenience items. Afterwards, keep this owner's manual in your car so you can refer to it at any time.

Several warranties protect your new Honda. Read the warranty booklet thoroughly so you understand the coverages and are aware of your rights and responsibilities.

Maintaining your car according to the schedules given in this manual helps to keep your driving trouble-free while it preserves your investment. When your car needs maintenance, keep in mind that your Honda dealer's staff is specially trained in servicing the many systems unique to your Honda. Your Honda dealer is dedicated to your satisfaction and will be pleased to answer any questions and concerns.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your Honda, other property, or the environment.

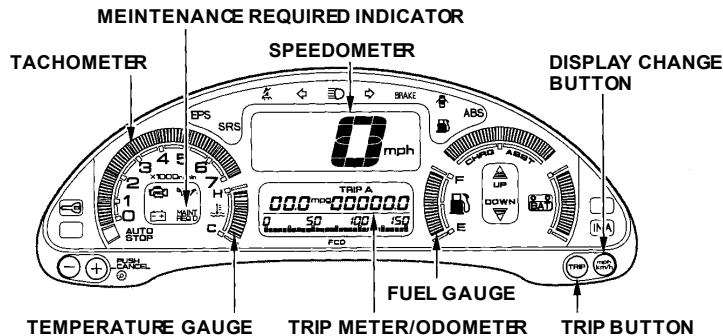

Liquid crystal is used in the meter panel. You may feel the indicators appear slowly in the low temperature.

### Speedometer

This shows your speed in miles per hour (mph) or kilometers per hour (km/h).

### Display Change Button



The Display Change button switches the speedometer reading between miles per hour and kilometers per hour. It also changes the odometer and trip meters to read in miles or kilometers correspondingly. To change the readings, push the Display Change button.

### Odometer

The odometer shows the total distance your car has been driven. It displays in miles and kilometers. It is illegal under U.S. federal law and Canadian provincial regulations to disconnect, reset, or alter the odometer with the intent to change the number of miles or kilometers indicated.

CONTINUED

# Gauges

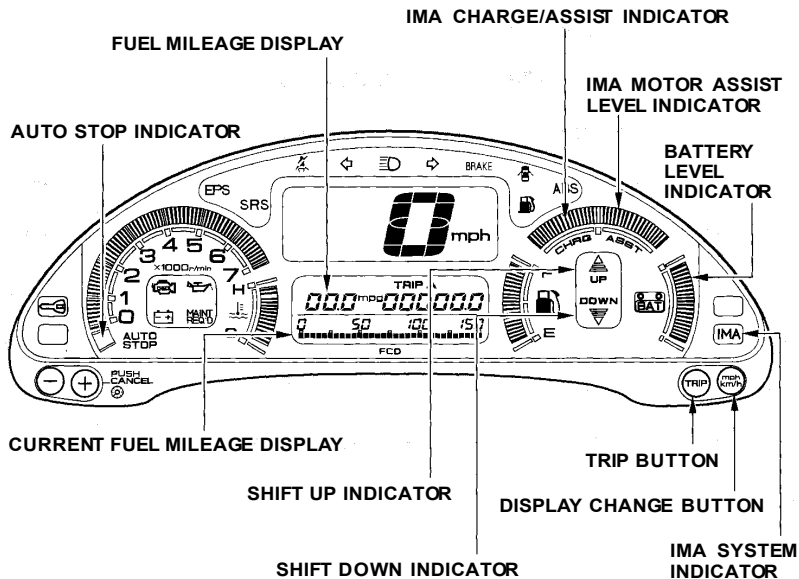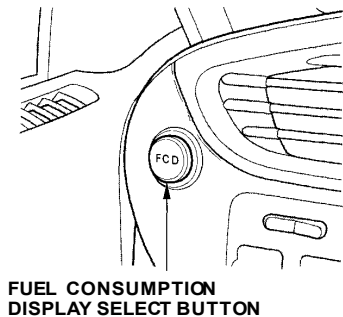


## Gauges

5. Use the Trip button to select another mileage display.
6. Press and hold the FCD Select button again to turn off that display.
7. Use the Trip button to select the third display.
8. Press and hold the FCD Select button again to turn off that display.

Although the displays are turned off, the average fuel mileages continue to be calculated. The displays will turn back on when you press and hold the FCD Select button again.


### Battery Level Gauge

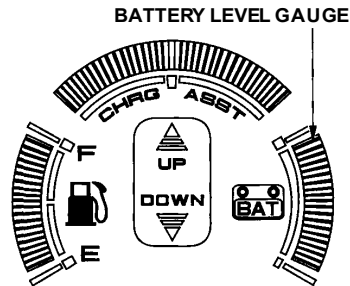

This gauge shows you the state of charge of the battery for the Integrated Motor Assist (IMA). This battery is recharged by the engine, and discharged by the IMA when it is assisting the engine with powering the vehicle.

If the battery is mostly discharged, the Auto Idle Stop operation is disabled. (See page [134](#))

Charge/Assist Gauge

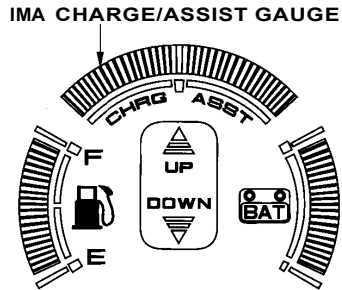

This gauge shows the status of the Integrated Motor Assist. If the indicator is on the left side of the gauge, the IMA battery is being charged. If the indicator is on the right side of the gauge, the IMA is assisting the engine.

# Index

<b>A</b>	
Accessories and Modifications...	126
Accessories.....	126
Additional Safety Precaution...	127
Modifications.....	127
ACCESSORY (Ignition Key Position).....	68
Accessory Power Socket.....	79
Adding	
Brake Fluid.....	171
Clutch Fluid.....	171
Engine Coolant.....	163
Engine Oil.....	159
Manual Transmission Fluid .....	170
Windshield Washer Fluid.....	169
Additional Information About	
Your Seat Belts.....	34
Lap/Shoulder Belt.....	34
Seat Belt Maintenance.....	35
Seat Belt System Components..	34
Additional Information About	
Your SRS.....	36
Additional Safety Precautions...	39
How the SRS Indicator Works.....	38

How Your Airbags Work.....	36
SRS Components.....	36
Additives, Engine Oil.....	160
Adjustments	
Mirrors.....	76
Seats.....	74
Airbag (SRS).....	9, 46
Air Conditioning System.....	88
Maintenance.....	180
Usage.....	88
Air Outlets (Vents).....	88
Air Pressure, Tires.....	182
Normal Driving.....	182
Alcohol in Gasoline.....	238
Antifreeze.....	163
Anti-theft Steering Column	
Lock.....	67
Appearance Care.....	197
Audio System.....	96
Auto Idle Stop.....	134
<b>B</b>	
Battery	
Charging System Indicator.....	54, 219

Jump Starting.....	214
Maintenance.....	175
Specifications.....	235
Before Driving.....	117
Belts, Seat.....	8
Beverage Holder.....	78
Body Repairs.....	203
Brakes	
Break-in, New Linings .....	118
Fluid.....	171
Light, Burned-out.....	193
Parking.....	77
System Indicator.....	46, 221
Wear Indicators.....	139
Braking System.....	140
Break-in, New Car.....	118
Brightness Control, Instruments..	60
Brights, Headlights.....	59
Bulb Replacement	
Back-up Lights.....	193
Brake Light.....	193
Front Parking Lights.....	191
Front Side Marker Lights.....	191
Headlights.....	190

CONTINUED



# Index

---

Bulb Replacement	
Interior Light.....	195
License Plate Lights.....	194
Specifications.....	235
Turn Signal Lights.....	191
Bulbs, Halogen.....	196

## C

Cables, Jump Starting With.....	214
Capacities Chart.....	234
Carbon Monoxide Hazard.....	40
Carrying Cargo.....	128
Cassette Player	
Care.....	116
Operation.....	102
CAUTION, Explanation of.....	ii
CD Changer.....	112
CD Player.....	106
Certification Label.....	232
Chains.....	187
Charge/Assist Gauge.....	55
Change Oil	
How to.....	161
When to.....	150
Changing a Flat Tire.....	185

Changing Engine Coolant.....	165
Charging System Indicator... 54,	219
Checking	
Battery Condition.....	175
Brake Fluid.....	171
Clutch Fluid.....	171
Drive Belts.....	181
Engine Coolant.....	123
Engine Oil.....	122
Fuses.....	222
Manual Transmission Fluid....	170
Checklist, Before Driving.....	117
Child Safety.....	19
Cleaner Element, Air.....	173
Cleaning	
Exterior.....	198
Interior.....	201
Seat Belts.....	201
Vinyl.....	201
Windows.....	202
Clock, Setting the.....	101
Clutch Fluid.....	171
CO in the Exhaust.....	240
Cold Weather, Starting in.....	133
Compact Spare.....	206
Consumer Information*.....	244

Controls, Instruments and.....	58
Coolant	
Adding.....	163
Checking.....	123
Proper Solution.....	163
Replacing.....	165
Temperature Gauge.....	56
Corrosion Protection.....	202
Crankcase Emissions Control	
System.....	240
Current Fuel Mileage.....	53
Customer Relations Office.....	244

## D

DANGER, Explanation of.....	ii
Dashboard.....	2, 44
Daytime Running Lights.....	60
Dead Battery, What to Do.....	214
Defects, Reporting Safety.....	248
Defog and Defrost.....	82
Defogger, Rear Window.....	63
Defrosting the Windows.....	82
Dimensions.....	234
Dimming the Headlights.....	59

## Index

<b>E</b>	
Economy, Fuel.....	124
Emergencies on the Road.....	205
Battery, Jump Starting.....	214
Brake System Indicator.....	221
Changing a Flat Tire.....	207
Dipstick	
Engine Oil.....	122
Directional Signals.....	61
Disabled, Towing Your Car If.....	228
Disc Brake Wear Indicators.....	139
Disposal of Used Oil.....	162
Display Change Button.....	49
Doors	
Locking and Unlocking.....	69
DOT Tire Quality Grading.....	236
Downshifting, 5-speed Manual	
Transmission.....	136
Drive Belts.....	181
Driver and Passenger Safety.....	5
Driving.....	131
Economy.....	124
In Bad Weather.....	142
In Foreign Countries.....	239

Charging System Indicator.....	219
Checking the Fuses.....	223
Low Oil Pressure Indicator.....	218
Malfunction Indicator Lamp.....	220
Overheated Engine.....	217
Emergency Brake.....	77
Emergency Flashers.....	63
Emergency Towing.....	228
Emissions Controls.....	240
Engine	
Belts.....	181
Coolant Temperature Gauge.....	56
Malfunction Indicator	
Lamp.....	47, 220
Oil, What Kind to Use.....	159
Overheating.....	217
Specifications.....	234
Engine Speed Limiter.....	137
Ethanolin Gasoline.....	238
Evaporative Emissions Controls..	240
Exhaust Fumes.....	40
Expectant Mothers, Use of Seat	
Belts by.....	17
Exterior, Cleaning the.....	198

<b>F</b>	
Fabric, Cleaning.....	201
Fan, Interior.....	82
Features, Comfort and	
Convenience.....	81
Filling the Fuel Tank.....	119
Filter	
Air Conditioning.....	181
Oil.....	161
5-speed Manual Transmission	
Checking Fluid Level.....	170
Shifting the.....	136
Flashers, Hazard Warning.....	63
Flat Tire, Changing a.....	185
Fluids	
Brake.....	171
Clutch.....	171
Manual Transmission.....	170
Windshield Washer.....	169
FM Stereo Radio	
Reception.....	110
Foreign Countries, Driving in.....	239
Four-way Flashers.....	63

CONTINUED



# Index

---

Front End, Towing by	
Emergency Wrecker.....	228
Fuel.....	118
Fill Door and Cap.....	119
Gauge.....	56
Octane Requirement.....	118
Oxygenated.....	238
Reserve Indicator.....	56
Tank, Filling the.....	119
Fuses, Checking the.....	223

## G

Gas Mileage, Improving.....	124
Gasohol.....	238
Gasoline.....	118
Fuel Reserve Indicator.....	47
Gauge.....	49
Octane Requirement.....	118
Tank, Filling the.....	119
Gas Station Procedures.....	119
Gauges	
Engine Coolant	
Temperature.....	56
Fuel.....	56

Gearshift Lever Positions	
5-speed Manual	
Transmission.....	136
Glass Cleaning.....	202
Glove Box.....	78

## H

Halogen Headlight Bulbs.....	190
Hatch	
Opening the.....	69
Open Monitor Light.....	47
Hazard Warning Flashers.....	63
Headlights	
Daytime Running Lights.....	60
High Beam Indicator.....	47
High Beams, Turning on.....	59
Low Beams, Turning on.....	59
Reminder Beeper.....	59
Replacing Halogen Bulbs.....	190
Turning on.....	61
Heating.....	81
High Altitude, Starting at.....	133
High-Low Beam Switch.....	59
Hood Latch.....	174
Hood, Opening the.....	120

Horn.....	3
Hot Coolant, Warning about.....	163
Hydraulic Clutch.....	171
Hydroplaning.....	142

## I

Identification Number, Vehicle... ..	232
If Your Car Has to be Towed.....	228
Ignition	
Keys.....	65
Switch.....	67
Timing Control System.....	241
Important Safety Precautions .....	6
Indicator Lights, Instrument	
Panel.....	45
Inflation, Proper Tire .....	182
Normal Driving.....	183
Inside Mirror.....	74
Inspection, Tire.....	184
Instrument Panel.....	45
Instrument Panel Brightness.....	60
Interior Cleaning.....	201
Interior Light.....	80
Introduction.....	i

# Index

## J

Jacking up the Car.....	207
Jack, Tire.....	207
Jump Starting.....	214

## K

Keys.....	65
-----------	----

## L

Label, Certification.....	232
Lane Change, Signaling.....	61
Lap/Shoulder Belt.....	34
Leaking of Exhaust into Car.....	40
Lifetime Fuel Mileage.....	53
Lights	
Bulb Replacement.....	193
Indicator.....	47
Parking.....	46
Turn Signal.....	61
Load Limit.....	129
LOCK (Ignition Key Position).....	67
Locks	
Fuel Fill Door.....	119

Hatch.....	69
Low Coolant Level.....	123
Low Fuel Indicator.....	56
Lower Gear, Downshifting to a....	137
Lubricant Specifications Chart....	234
Luggage.....	128

## M

Maintenance.....	145
Owner Maintenance Checks....	157
Record.....	155
Required Indicator.....	57
Safety.....	146
Schedule.....	148
Malfunction Indicator Lamp..	47, 220
Manual Transmission.....	136
Manual Transmission Fluid .....	170
Meters, Gauges.....	49
Methanol in Gasoline.....	238
Mirrors, Adjusting.....	76

## N

New Vehicle Break-in .....	118
NOTICE, Explanation of.....	ii

Numbers, Identification.....	232
------------------------------	-----

## O

Octane Requirement, Gasoline... ..	118
Odometer.....	49
Odometer, Trip.....	51
Oil	
Change, How to.....	161
Change, When to.....	150
Checking Engine.....	122
Selecting Proper Viscosity	
Chart.....	160
ON (Ignition Key Position).....	68
Onboard Refueling Vapor	
Recovery.....	240
Opening the Hatch.....	69
Opening the Hood.....	120
Operation in Foreign Countries..	239
Outside Mirrors.....	76
Overheating Engine.....	217
Owner Maintenance Checks.....	157
Oxygenated Fuels.....	238

CONTINUED

## V

# Index

## P

Paint Touch-up.....	200
Panel Brightness Control.....	60
Parking.....	138
Parking Brake.....	77
Parking Brake and Brake System Indicator.....	46, 221
Parking Over Things that Burn...	242
PGM-FI System.....	241
Polishing and Waxing.....	200
Pre-Drive Safety Checklist.....	11
Pregnancy, Using Seat Belts.....	17
Protecting Adults.....	12
Additional Safety Precautions...	18
Advice for Pregnant Women.....	17
Protecting Children.....	19
Protecting Larger Children.....	29
Protecting Small Children.....	26
Using Child Seats with Tethers.....	33

## R

Radiator Overheating.....	217
Radio/Cassette Sound System.....	96

Rear Lights, Bulb Replacement..	193
Rear View Mirror.....	77
Rear Window Defogger.....	63
Rear Window Washer.....	63
Rear Window Wiper.....	63
Reclining the Seat Backs.....	74
Replacement Information	
Air Cleaner Element.....	173
Engine Coolant.....	165
Engine Oil and Filter.....	161
Fuses.....	222
Light Bulbs.....	193
Schedule.....	148
Drive Belt.....	181
Tires.....	185
Wiper Blades.....	177
Replacing Seat Belts After a Crash.....	35
Reserve Tank, Engine	
Coolant.....	123, 165
Restraint, Child.....	19
Rotation, Tire.....	185

## S

Safety Belts.....	8, 34
-------------------	-------

Safety Defects, Reporting*.....	248
Safety Features.....	7
Airbags.....	9
Door Locks.....	10
Head Restraints.....	10
Seat Belts.....	8
Seats & Seat-Backs.....	10
Safety Labels, Location of.....	41
Safety Messages.....	ii
Seat Belts, Additional Information.....	41
Lap/Shoulder Belt.....	34
Seat Belt Maintenance.....	35
Seat Belt System Components..	36
Seat Belts.....	8, 34
Cleaning.....	201
Maintenance.....	35
Reminder Light and Beeper.....	34, 46
System Components.....	34
Tether Anchorage Points.....	33
Use During Pregnancy.....	17
Wearing a Lap/Shoulder Belt...	15
Seats, Adjusting the.....	74
Serial Number.....	232
Service Intervals.....	148



# Index

---

Towing	
A Trailer.....	143
Emergency Wrecker.....	228
Transmission	
Checking Fluid Level, Manual.....	170
Fluid Selection.....	170
Identification Number.....	233
Shifting the Manual.....	136
Treadwear.....	236
Trip Meters.....	51
Trip Mileage.....	52
Turn Signals.....	61

## U

Underside, Cleaning.....	199
Unexpected, Taking Care of the.....	205
Uniform Tire Quality Grading.....	236
Unleaded Gasoline.....	118
Upholstery Cleaning.....	201
Used Oil, How to Dispose of.....	162

## V

Vehicle Capacity Load.....	129
Vehicle Dimensions.....	234
Vehicle Identification Number.....	232
Vehicle Storage.....	196
VIN.....	232
Vinyl Cleaning.....	201
Viscosity, Oil.....	160

## W

Warning BEEPERS	
Headlights on.....	59
Key in Ignition.....	68
Seat Belts.....	34, 46
WARNING, Explanation of.....	ii
Warning Labels, Location of.....	41
Warranty Coverages*.....	247
Washer, Windshield	
Operation.....	62
Washing.....	199
Waxing and Polishing.....	200
Wheels	
Alignment and Balance.....	184
Compact Spare.....	206

Wrench.....	209
Windows	
Cleaning.....	202
Rear, Defogger.....	63
Windshield	
Cleaning.....	61
Defroster.....	94
Wipers, Windshield	
Changing Blades.....	177
Operation.....	63
Worn Tires.....	184
Wrecker, Emergency Towing.....	205

\* U.S. and Canada only

## Service Information Summary

---

**Gasoline:**

Unleaded gasoline, pump octane number of 87 or higher.

**Fuel Tank Capacity:**

10.6 US gal (40 l, 8.8 Imp gal)

**Recommended Engine Oil:**

API Service SJ "Energy Conserving" oil, SAE 0W-20 viscosity (see page [159](#)).

Oil change capacity (including filter):

2.6 US qt (2.5 l, 2.2 Imp qt)

**5-speed Manual Transmission****Fluid:**

Honda Manual Transmission Fluid preferred, or an API service SG, SH or SJ, SAE 10W-30 or 10W-40 motor oil as a temporary replacement (see page [170](#)).

Capacity (including differential):

1.6 US qt (1.5 l, 1.3 Imp qt)

**Brake Fluid:**

Genuine Honda DOT3 Brake Fluid preferred, or a DOT 3 or DOT 4 brake fluid as a temporary replacement (see page [171](#)).

**Tire Pressure (measured cold):**

Front:

38 psi (260 kPa)

Rear:

35 psi (240 kPa)

Spare Tire:

60 psi (420 kPa)